



# Cervantes 4

Complete User Manual

## Cervantes 4

The BQ team would like to thank you for purchasing your new **Cervantes 4** ereader. We hope you enjoy using it.

You can use this ereader to read books, buy new ones from the **Store**, share saved notes, check definitions and translations of English and Spanish terms, organise the **Library** and adjust the display font to your liking.

### About this manual

- For proper operation of your ereader please read this manual carefully before using it.
- Some of the images and screenshots shown in this manual may differ slightly from those of the final product. Likewise, due to firmware updates, it is possible that some of the information in this manual does not correspond exactly to the operation of your device. To obtain the latest version please go to [bq.com](http://bq.com)
- BQ shall not be held liable for any issues relating to performance or incompatibility resulting from modification of the registry settings by the user. Nor shall it be held liable for any incompatibility issues with third-party applications available through the app stores.

### Icon guide



**Danger:** situations that could pose a risk to personal safety or health.



**Warning:** situations which pose a risk to the correct functioning of the device but not to personal safety or health.



**Tip:** additional information to help you make the most of your device.

## Trademarks

The BQ logo is a registered trademark of Mundo Reader, S.L.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance.

MicroSD™ is a logo and registered trademark of SD-3D, LLC.

All other trademarks are the property of their respective owners. All rights reserved.

The dictionaries preinstalled on the device are the property of:

“SM Diccionario Clave”

© 2006 Ediciones SM

Tecnología Dixio - © 2011 Semantix

“Wordnet”

© 2005 Princeton University

Powered by Dixio - © 2011 Semantix

“Semantix Simple English Words” y

“Spanish-English Dictionary by Semantix”

© 2010 Ediciones SM

Powered by Dixio - © 2011 Semantix

“Diccionario Inglés-Español de Semantix”

© 2010 Ediciones SM

Tecnología Dixio - © 2011 Semantix

## Contents

<b>06</b>	<b>Before Starting</b>
06	Box Contents
07	Product Overview
<b>08</b>	<b>Getting Started</b>
08	Switching the Device On and Off
09	Home
10	Charging the device
11	Maintaining the battery
11	Transferring files
12	Inserting and Removing the MicroSD Card
<b>13</b>	<b>How to use your eReader</b>
13	Touchscreen
13	Home Button
14	Using the keyboard
<b>15</b>	<b>How to read</b>
15	Reading menu
17	Contextual reading menu

<b>19</b>	<b>Main menu</b>
19	Home Screen
19	Search
20	Library
24	Store
25	Settings
25	User information
25	Device information
26	Device options
27	Reader
28	Energy saving
28	Screensaver
29	Wi-Fi connection
29	Light settings
29	Web browser
29	About
<b>30</b>	<b>Adobe DRM</b>
30	Download books with DRM using Adobe Digital Editions
<b>31</b>	<b>Appendices</b>
31	Appendix A: Technical Specifications
31	Appendix B: Cleaning and Safety
33	Appendix C: Information on Exposure to Radio Waves and SAR ( <i>Specific Absorption Rate</i> )
34	Appendix D: Information regarding maximum transmission power and frequency bands
34	Appendix E: Disposing of this Product Correctly

## Before Starting

### Box Contents

 
Please check the contents of the box before using your device for the first time. If any of the following items are missing, contact the retailer from whom you acquired the device.

- ✓ Cervantes 4
- ✓ USB (type A) to micro-USB (type A) cable
- ✓ Documentation:  
Warranty and important information



BQ genuine accessories comply with the strictest quality and safety standards. As a manufacturer, BQ guarantees the compatibility of its devices only with its genuine accessories. It will not be liable for damages caused by the use of third party accessories with BQ devices, or by the use of third party devices with genuine BQ accessories.

## Product Overview

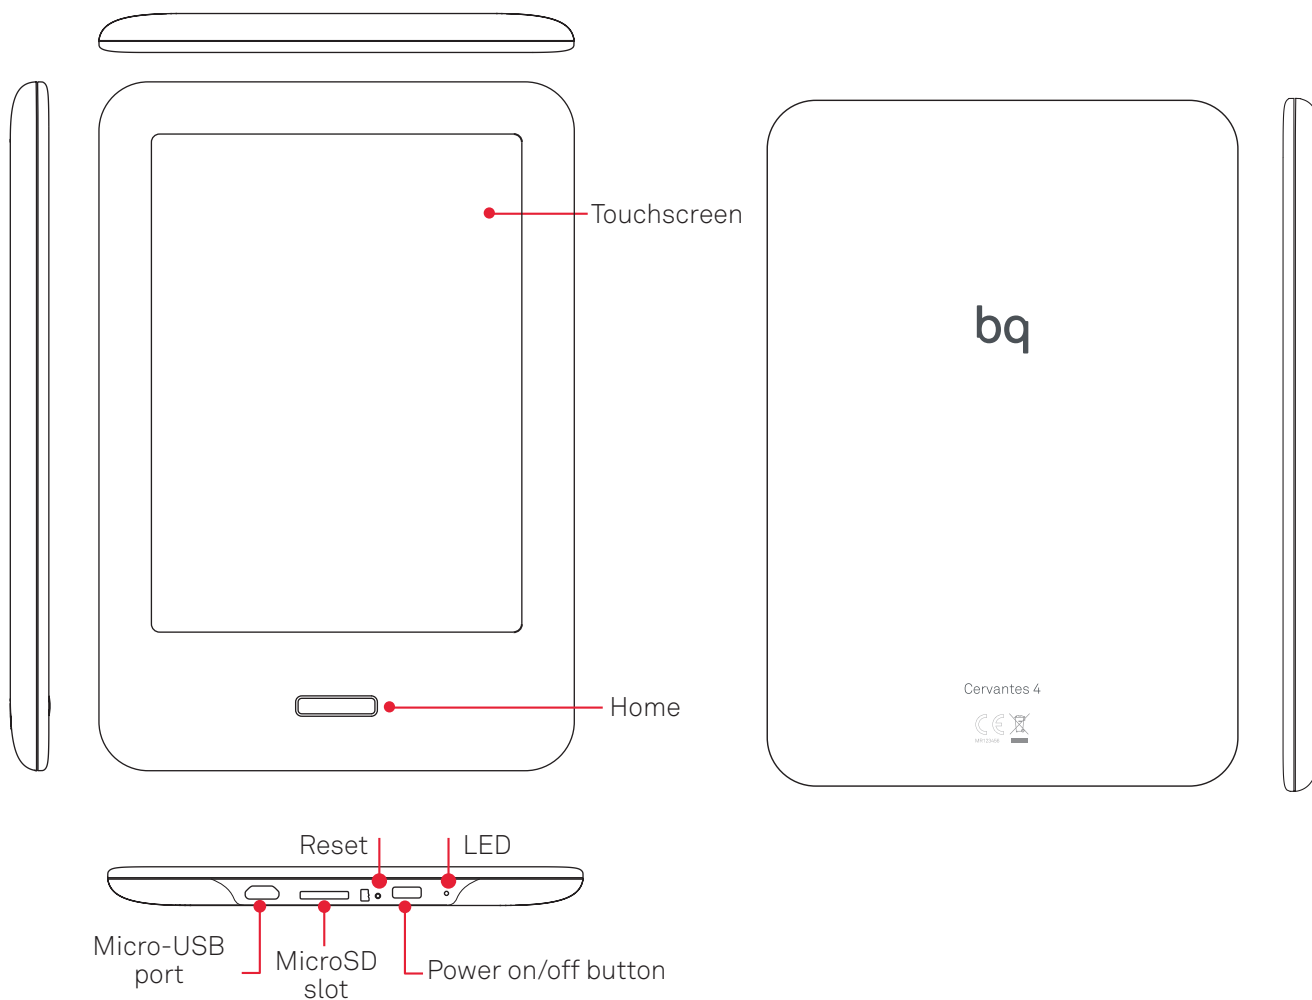


! Do not attempt to remove the rear cover of your Cervantes 4 as this may damage the device.  
Do not attempt to remove the battery, doing so may invalidate the warranty.

! Do not insert pointed objects into the LED hole as this may damage it.


## Getting Started
 
### Switching the Device On and Off

To switch on your Cervantes 4, hold down the power button for two seconds. It is located at the bottom edge of the ereader. A notification will appear on the screen: **Powering on** and a progress bar.

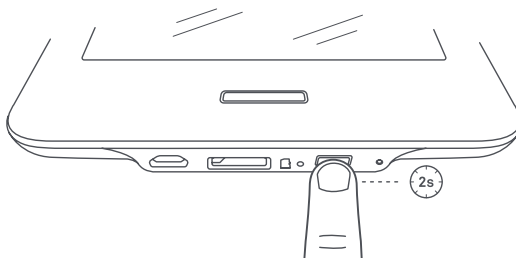

 To switch off your device, hold down the power button for two seconds. A pop-up window will appear. Tap **Accept**.

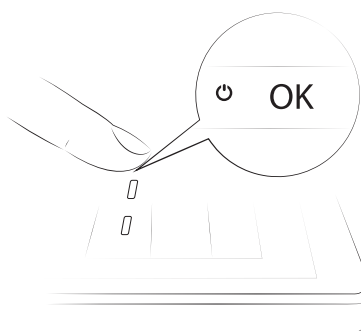

The device automatically goes into **Standby mode** after ten minutes of inactivity (according to factory settings). The automatic standby timeout can be modified in **Settings > Device options > Energy saving > Standby timeout**. Available options are 2, 5, 10 or 20 minutes.

Standby mode can also be enabled manually by double-pressing the **Home Button**. To resume, repeat the action.



A brief press on the power button will switch off the screen but not the device.



If your device freezes, a restart can be forced by holding down the power button for 20 seconds or pressing the **Reset** button. Press again to switch on as normal.


## Home

 When you switch on your device for the first time (or after performing a factory reset), you will have to set the language and the time zone, and **connect to a Wi-Fi network** for activation.

The device activation process is required in order to enable some services, such as the use of dictionaries and OTA (Over the Air) updates.

It can be activated at a later stage by tapping **Activate device** in the **Store** or **Settings**, or via the **Library** by tapping the **Synchronise** button.

Afterward, your device can be linked with the **Store** by creating a new account or using an existing one. Only an email address and password are needed for this process. You will be asked to enter details of a bank card, however, this step may be omitted.

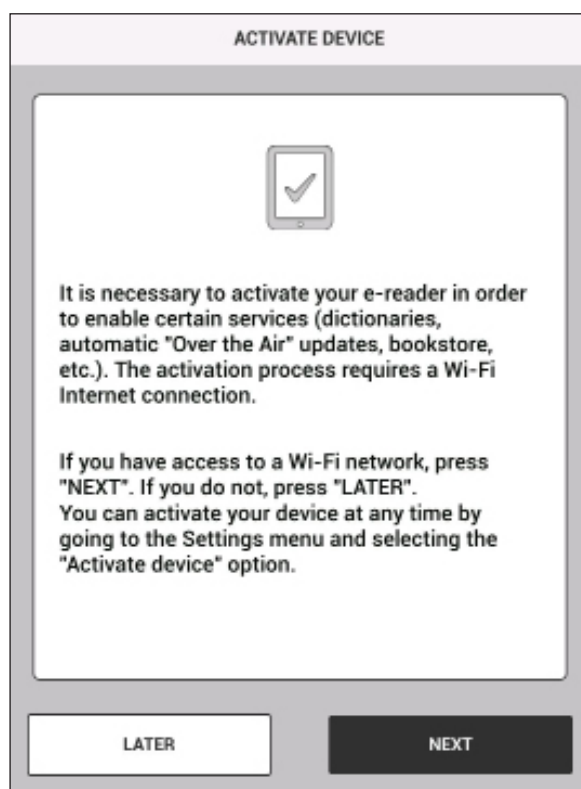


## Charging the device

Your Cervantes 4 contains a rechargeable 1500 mAh Li-ion battery (non-removable), which is charged by connecting a USB cable to a computer or power socket.

To charge the battery via a computer, connect your ereader to it using the supplied USB cable. Charging speed is greater if the device is connected to a power supply rather than a computer.

 To charge the battery via a mains adapter, connect the micro-USB end of the cable to the device and the USB end to the AC/DC adapter, then plug the adapter into the socket.

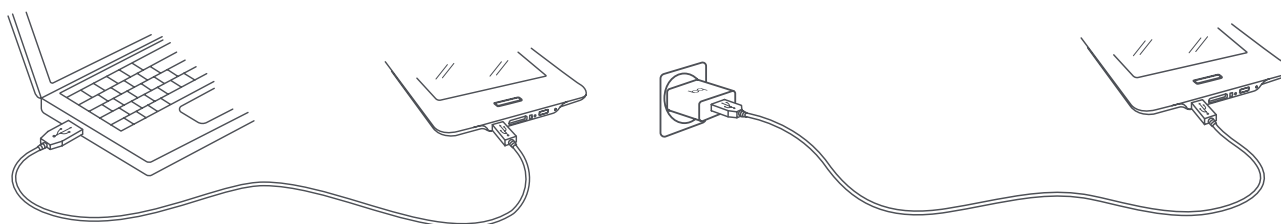

The battery icon is located at the top of the screen. It shows the device's charge status.



Flat battery.



Charging battery.



Battery charged.



The bar indicates the remaining charge.



A full charge is recommended when this is done for the first time. This will help calibrate the battery meter. Note that some batteries perform better after completing a number of charge cycles. The time required to charge your device can vary markedly depending on whether it is charged via a mains adapter or a computer USB port.



To optimally charge the device we recommend using a 5 V 1 A charger.



The battery in your Cervantes 4 is non-removable. Removal by anyone other than our Technical Support personnel may damage the device and invalidate the Warranty.

## Maintaining the battery

Although the battery's capacity decreases with use, its service life can be lengthened by observing the following recommendations:

- Use the device at least once a week.
- Fully charge the battery on a regular basis. Never leave the battery totally flat for a prolonged period of time.
- Keep the device and the battery away from heat sources at all times.

If the ereader only works when it is connected to the power supply, contact the retailer in order to change the battery.

## Transferring files

Files, such as books and documents, can be transferred between a microSD card and your computer, allowing these to be saved on either of the two.

Follow these steps:

1. Insert the microSD card into the ereader as shown in the [Inserting and Removing the MicroSD Card](#) section.
2. Connect the micro-USB end of the cable to the device and the USB end to the computer. Tap **Accept** when the following text appears: ***Do you want to enable mass storage mode? The device will be temporarily inoperative.***
3. The computer will recognise the internal memory and/or microSD card as **Removable drives**.
4. Copy the desired files from the computer to the microSD card and/or internal memory, or vice versa.
5. Once done copying, safely remove the device from the computer and disconnect the USB cable from the ereader and computer. The copied documents will be automatically classified in your [Library](#).



 
Do not remove the microSD card or unplug the cable while files are being transferred.

## Inserting and Removing the microSD Card

The memory of your Cervantes 4 can be expanded to 32 GB using a microSD card.

To insert a microSD card, follow these steps:

1. Ensure the pins face downward and point toward the screen, as shown in the diagram:

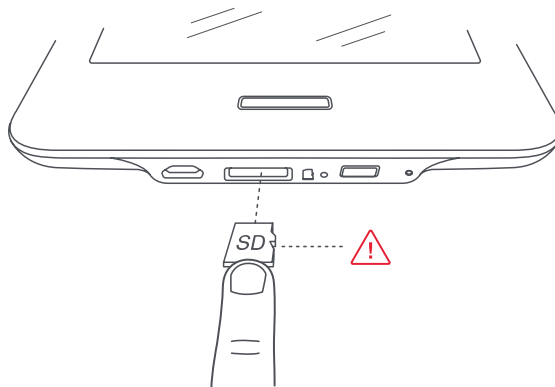

2. Push the card in until you hear a slight click, which indicates that it has been inserted correctly. If it is not inserted correctly the device may not recognise it and its contents will not be accessible.

To remove the microSD card, follow the steps in the previous section in reverse order while taking into consideration a few important points:

- a. For extra security we recommend the device be switched off before removing the microSD card.
- b. To remove it while the device is switched on and connected to a computer, first “safely remove” the card to avoid damaging it and losing data.



MicroSD and microSDHC cards are compatible with this device.




You can choose whether to store your multimedia files in your ereader’s internal memory or directly to the external microSD card. Note that any content stored on the external card will not be available when it is removed.


## How to use your eReader

 
### Touchscreen

Touching the surface of the touchscreen allows interaction with the device (select a menu, an item, turn pages, make notes, etc.).

The **Home Screen** shows the device's status, provides access to the last book read and contains the **menu**, which is located at the bottom: **Search, Library, Store, Settings** and **Help**.

Tap the **Last read** icon  to quickly access the book you are currently reading, or tap one of the books on the home screen.

Tap the Wi-Fi or Screen light icon  to access the corresponding **Quick settings**, where these functions can be enabled or disabled. The intensity and tone\* of the light can also be adjusted here. Tapping the battery icon shows a window containing the remaining charge percentage.

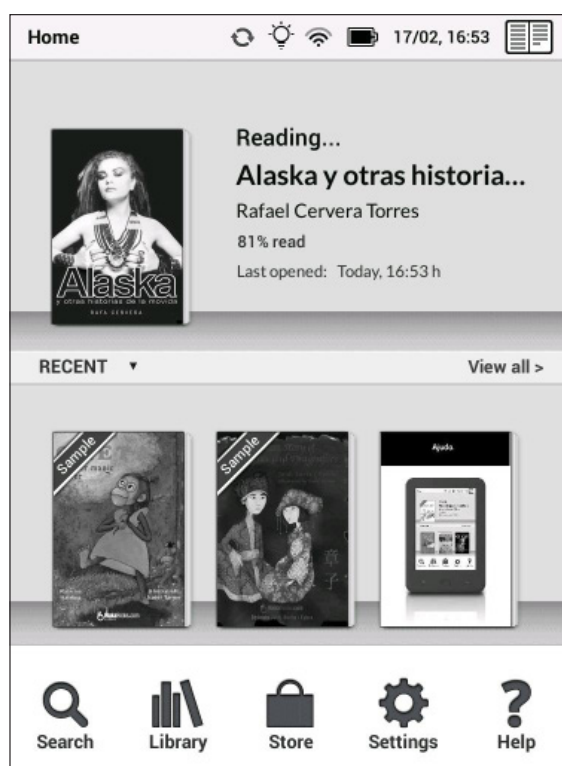


### Home Button

Press the **Home Button** to return to the home screen at any time. Long-pressing it turns the light on or off.

Double-press the **Home Button** to enable **Standby** mode. To resume, repeat the action.


## Using the keyboard

 Tap the letters on the keyboard to write. Once the desired text has been entered tap **Save** or **Go**.

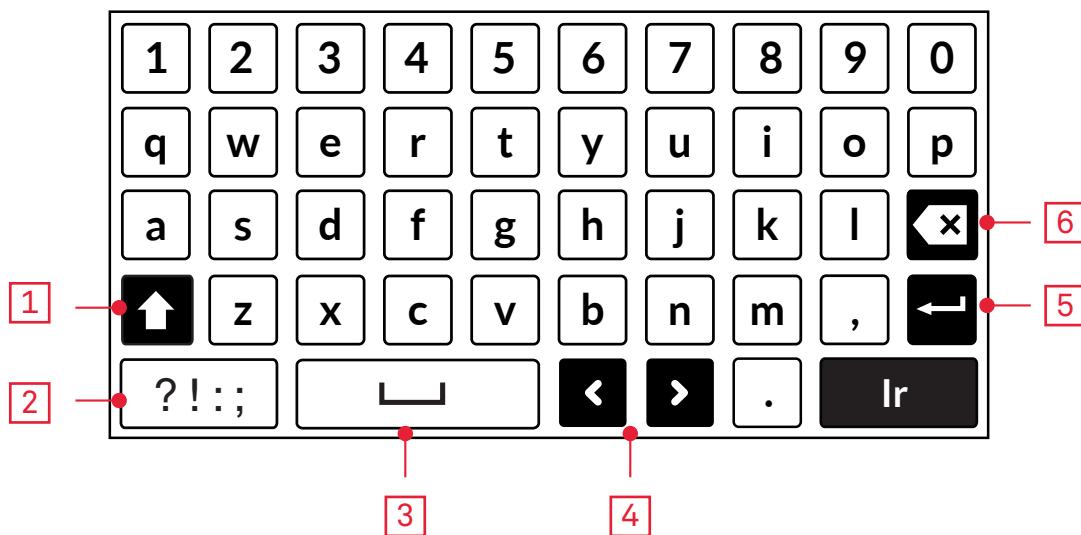

- 1** Enables/disables caps lock.
- 2** Enables special characters.
- 3** Space.
- 4** These move the cursor one character at a time in order to write or make rectifications.
- 5** Carriage return.
- 6** Delete.


 Long-pressing the **S, C, N** or **comma (,)** will show special characters.

 Long-pressing any vowel will show its accented form and special characters.

## How to read

To read a book, access the **Library** by tapping . If you have already started to read a book and you wish to continue reading it, tap .




The book will open to the first page or to the page where you previously left off. To turn pages, tap the right or left third of the screen to go forward or backward (this depends on the page turn mode, consult the **Page turn** section). When you have finished reading a book, press the home button to return to the home page.

To create a bookmark, tap the top right corner and the following icon . Tap the icon again to delete the bookmark.

## Reading menu




While you are reading, tap the centre of the screen to access the **Reading menu**. The following options will appear:

 
-  **Contents.** Access the contents page of the book you are currently reading. If you have added any notes, highlighting or bookmarks, they will also be displayed.
-  **Book card.** View the book's synopsis. The book's status can also be changed to: Reading, Read or Unread. It can be added to a collection, notes can be exported or it can be archived if it is a store purchased book. If the book is in the SD card or internal memory it can be copied or deleted.
-  **Go to page.** Go directly to the entered page number.

**aA Appearance.** Adjust the margins, line spacing, justification, text size and font, opt to use the publisher's settings and enable PDF mode for ebooks with this format. The format of the book being read determines which of these settings can be adjusted.

**Q Search.** Search for words or phrases in the book being read.

**PDF mode** can be enabled or disabled in order to read ebooks in this format. It is enabled by default in order to adjust the PDF document to the size of your ereader's screen. The  icon will appear in the bottom right corner, it enables or disables the navigation bar. This bar provides zoom functionality, exploration of the area currently in view, scrolling, and horizontal and vertical screen rotation.

Tap the cross to close the navigation bar. If the text size is increased you can also scroll by swiping the screen or by tapping the navigation arrows. When **PDF mode** is disabled, pages are turned as defined by the page turn mode.

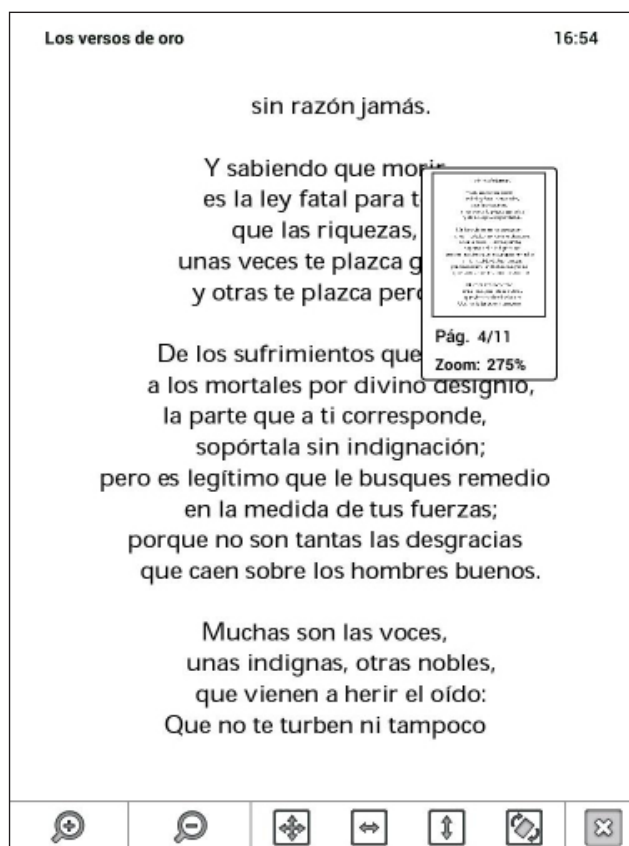


The following table indicates the compatibility of each format:

	appearance					metadata	display options				
	Font size	Font type	Justification	Margin	Line spacing	Table of contents metadata extraction cover	Landscape and zoom	Highlighting notes	Bookmarks	Hyperlinks	Dictionary
epub	✓	✓	✓	✓	✓	✓	✗	✓	✓	✓	✓
pdf	✓	✗	✗	✗	✗	✓	✓	✗	✓	✓	✓
fb2	✓	✓	✗	✓	✓	✓	✗	✗	✓	✓	✓
mobi	✓	✓	✗	✓	✓	✓	✗	✗	✓	✓	✓
doc	✓	✓	✗	✓	✓	✗	✗	✗	✓	✓	✓
txt	✓	✓	✗	✓	✓	✗	✗	✗	✓	✓	✓
rtf	✓	✓	✗	✓	✓	✗	✗	✗	✓	✓	✓
html	✓	✓	✗	✓	✗	✗	✗	✗	✓	✓	✓

## Contextual reading menu

 While reading, long-pressing a word will display the **Contextual reading menu**.

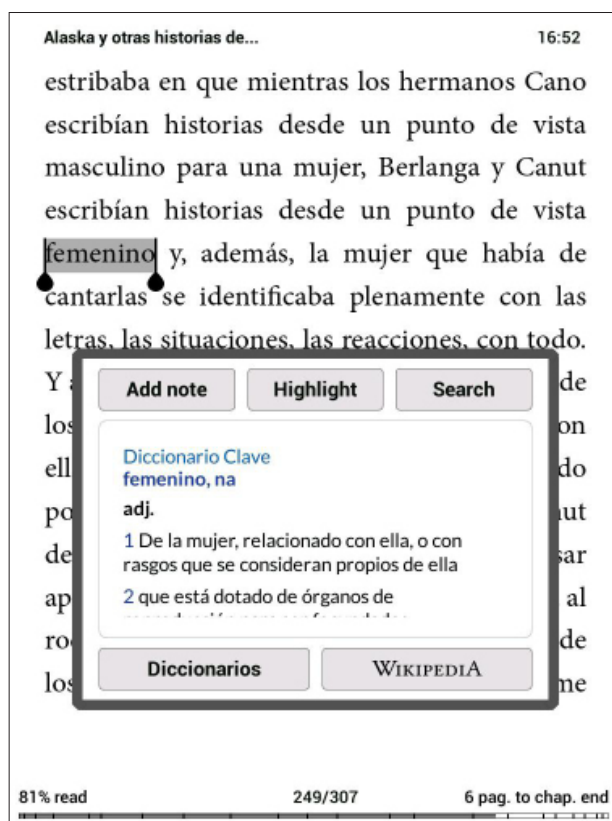


This menu contains the following options:

**Add note:** allows notes to be made in the book you are reading. Choosing **Add note** will display the virtual keyboard, allowing the note to be typed. Once saved, the text for which the note was made will remain highlighted. This note can be edited or deleted by briefly tapping it. Cursors will appear at the beginning and end of the text selection, allowing its adjustment.

**Highlight:** highlights a word or paragraph. To select more than one word, long-press the first word of the text to be highlighted then drag until the end of the paragraph. Cursors will appear at the beginning and end of the selection. Move these to adjust the text to be highlighted.

**Search:** searches for a word in the book being read. The pages in which it appears will be shown.

 
**Dictionaries:** looks up the definition or translation of a word in Wikipedia and in the dictionary that has been set as the default. Scroll the pop-up window up or down to view more definitions. The default dictionary is **Automatic**, it displays definitions of the selected word in Spanish and English. The dictionary can be changed while looking up a word by tapping the name of the Dictionary. A drop-down menu will open from which the desired dictionary can be selected. Wikipedia can also be used to look up the definition, however, a **Wi-Fi connection** must be enabled.

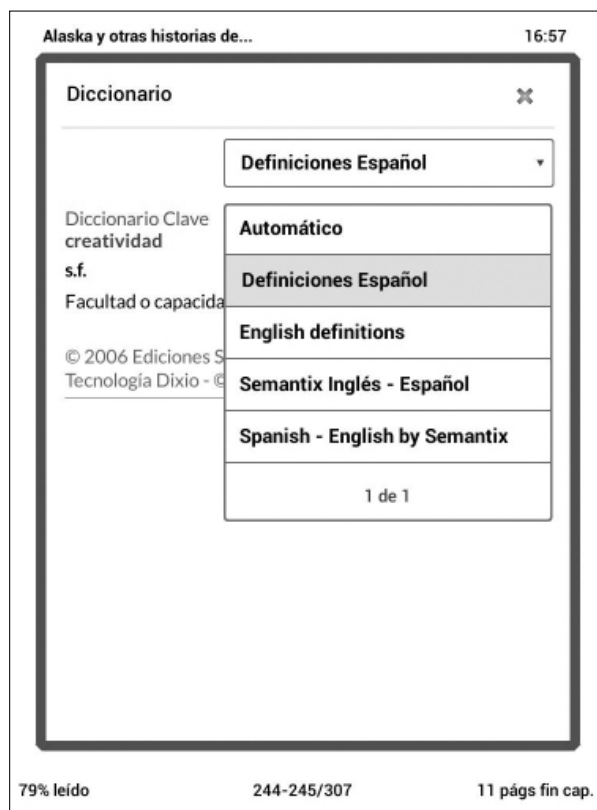

## Main menu

 
### Home Screen

The home screen offers access to: **Search**, **Library**, **Store**, **Settings** and **Help**. The Home screen can be accessed at any time by pressing the Home button.

The top bar shows the battery charge status, date and time (which are synchronised the first time the device connects to a **Wi-Fi network**), name of the current screen, integrated light status, Wi-Fi status if it is enabled and connected to a network, and lastly, the direct access button to your last read book .

Your last read book also appears here together with its corresponding details, namely the author, percentage read and the date and time of the last access.

Following are recommended books from the **Store**, or recently opened books. Tap See all to open the **Library**.

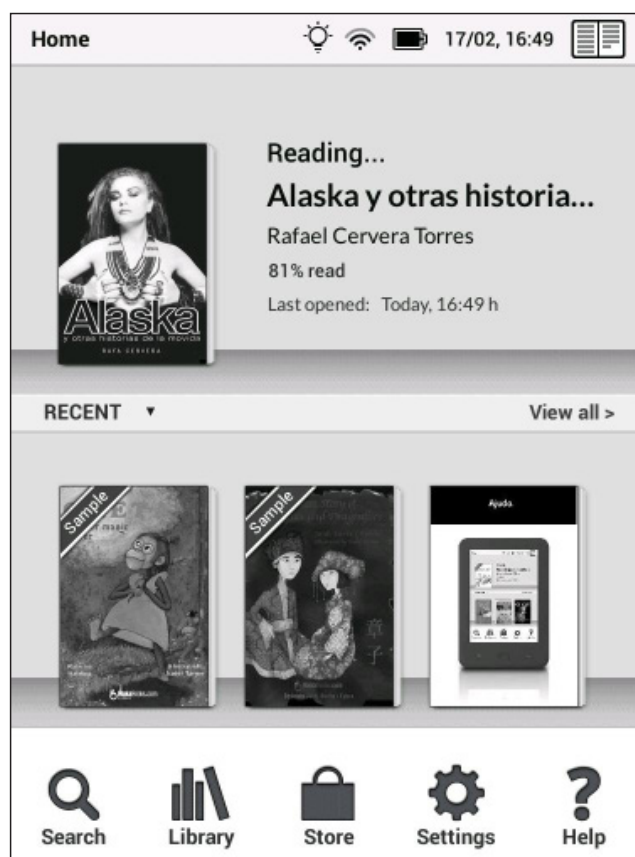


### Search

 
Enter a search string and tap **Search** at the bottom right of the virtual keyboard. Any books that contain the search terms will appear in a list below the search bar. It will search the internal memory of the device, any microSD/microSDHC cards in use or in the store, etc.

## Library

To open the **Library** tap .

Books in the internal memory and microSD card (if one is in the device), as well as those acquired in the **Store**, can be accessed through the **Library**. If the latter do not appear, tap the **Synchronise** button .

The list can be ordered by **Recency**, **Title** or **Author**. Searches can be performed by tapping the **Search** button  and entering the text via the virtual keyboard.

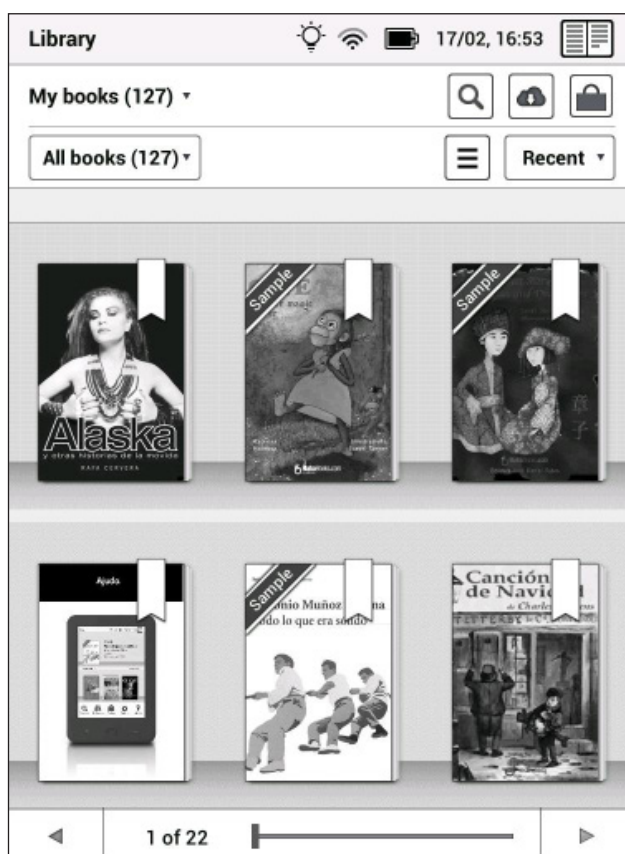

## ORGANISING THE LIBRARY

From the **Library** you can view all the ebooks stored on your device, access the **Store**, sync your ereader, browse the folders and files in the internal memory or SD card, etc.

To browse or turn the pages swipe the screen. Alternatively, tap the arrows or use the scroll bar, which are found at the bottom of the screen.

In **My books**, open the **All books** tab. Search the internal memory, the SD card or choose one of the available selection criteria.

Tap **My books** to display a drop-down menu that lets you choose between books downloaded from the **Store**, your **collections** or the **File explorer**.

Each individual option allows you to select other search criteria and views, which are listed below:

 
1. Under **My books** choose from:

**All books:** displays all the books stored on your ereader.

**Unread:** displays the books that have not been opened.

**Reading:** displays the books that you have previously read.

**Read:** displays the last books that you have marked as read.

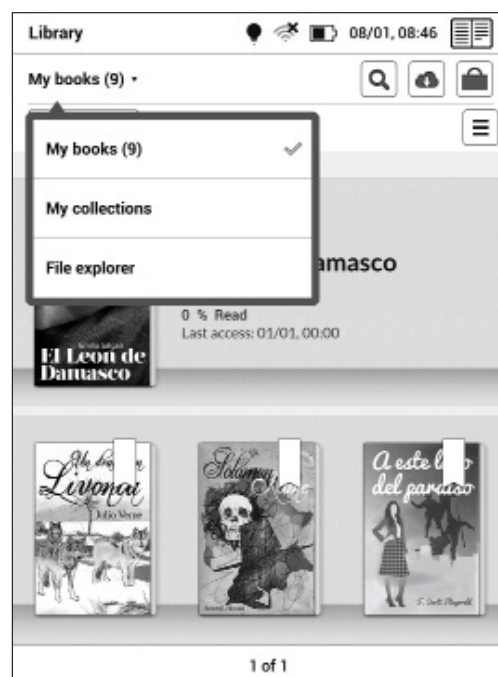

2. From the **Store** books, you can select:

**All books:** displays all the books acquired from the Store.

**Unread:** displays the books from the Store that have not been opened.

 
**Reading:** displays the books from the Store that you have previously read.

**Read:** displays the books that you have marked as read.

**Samples:** displays all the extracts or book samples you have downloaded from the Store.

**Bought:** displays all the books you have bought from the Store.


**Bought and archived:** displays all the books you have bought, which have been archived to save space on your ereader. Archived books can be downloaded again at any time.

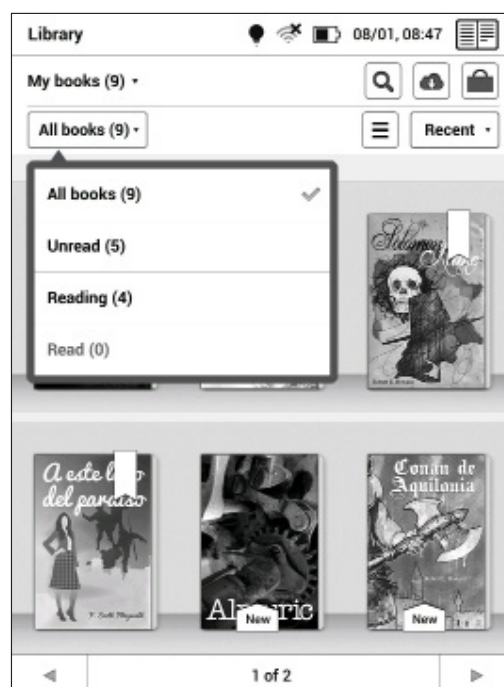

3. **My collections** lets you organise your library by creating collections that contain the books of your choice. These collections may be edited or deleted.



 4. Use the **File explorer** to browse the files and folders in the internal memory or SD card.

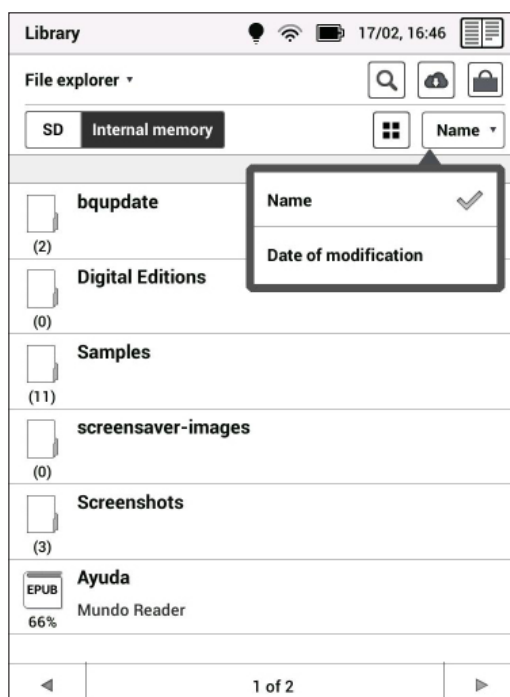


Long-pressing an ebook in the library will display a pop-up window containing its synopsis. From this window, the ebook's status can be changed to: **Reading**, **Unread** or **Read**. You can add it to one of your collections or create a new collection to order your library. Tap the arrows on the lower bar to move through the book cards.

More options are available if the book is stored in the device's memory or SD card:

- **Copy:** allows the book to be copied from the SD card to the device's internal memory and vice versa.
- **Export notes:** creates an .html file containing data on all highlighting, notes and bookmarks created in the ebook.
- **Delete:** removes the ebook from your device's internal memory.

 If it is a **Store** purchased book you can:



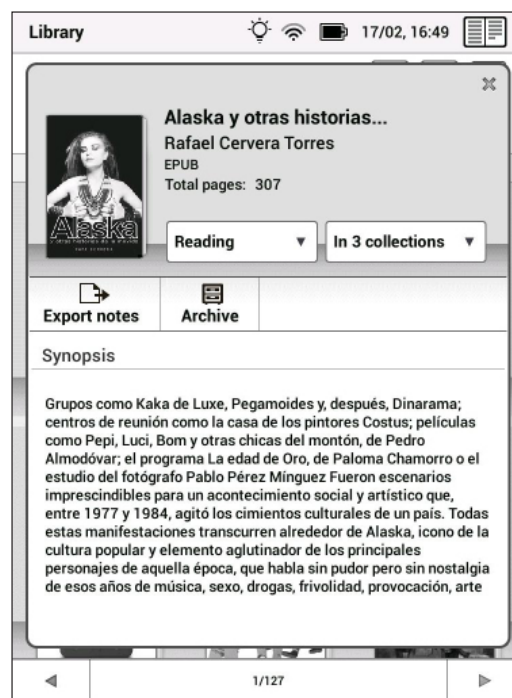


- **Archive:** when an ebook is archived it will cease to appear in your library, however, it remains associated with your account. Pressing the cover of an archived ebook displays a restore option, making it available on your device once again.



As for book samples downloaded from the **Store**, these can be purchased or deleted (they will no longer be available for download).

Any ebooks that you have previously opened appear in your library with a mark.

In the **Library**, the following buttons are available:

- |   |  |
|---|--|
|  | <b>Search.</b> Direct access to the search tool.   |
|  | <b>Sync.</b> Updates the list of books purchased from the Store so that they appear on your ereader. It also synchronises any notes, highlighting, bookmarks and reading points. |
|  | <b>Store.</b> Direct access to the Store.  |
|  | <b>Views.</b> Choose an icon view or list view.  |
|  | <b>Ordering.</b> Select the file ordering criterion.   |


## Store

To access the **Store** tap .

The Store's entire catalogue can be viewed using the options that appear on screen. Text searches using the author's name or book title, for example, can also be performed.

To create an account, an email address and password are required. Bank card details are optional. If you have already registered then use your email address and password to sign in. To be able to make purchases and download from the Store, bank card details must be provided when creating your account.

Selecting a book from the catalogue displays its publication data, summary and description. You may download an entire chapter to your device as a sample.

If you have previously made purchases or downloaded from the **Store**, these will appear in the **Library** under **Ebook store > All books**. If the acquired books do not appear, tap the  button to synchronise your **Library**.

To make a purchase you will have to provide the password and banking details that were supplied during your account registration.

If you have not registered, an account can be created by tapping **Store**.

 


To access the **Store** the device must be **connected to internet**.

## Settings

To access the settings for your ereader, tap  .

Various options will appear that can be modified and/or viewed: **User details**, **Device information**, **Device options**, **Wi-Fi connection**, **Light settings** and **Web browser**. Each one of these contains related details and options. A button to go back will appear at the top of the screen. To access an option, tap it.

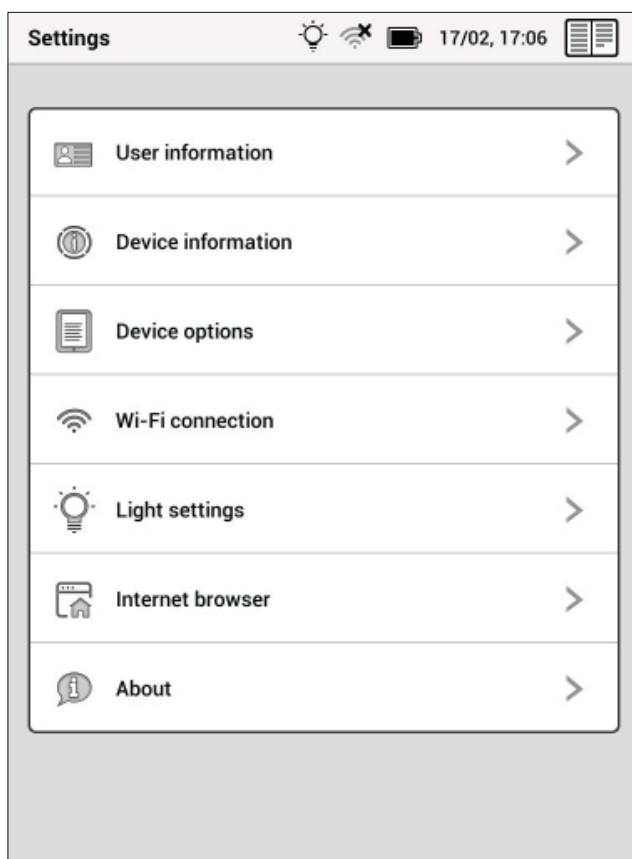

### User details

The account to which the device is linked can be checked or delinked.

The legal terms and conditions of the ereader can be viewed here and there is also an option to link your ereader to an **Adobe DRM** account.

### Device information

Check the battery status and available space in the internal memory or SD card.



**Basic information.** Provides information about your device's software, internal and external memories, battery level, kernel version, etc.



**Restore factory settings.** Deletes all personal data from your account and restores the device to factory settings.



**Update device.** Check if an update is available for your device. OTA stands for “Over the Air”, which refers to the way that firmware updates are sent to your device, namely, through a data connection. There are no complex update procedures and minimal user intervention is required.

Your device periodically checks for new updates to the operating system. These usually include performance improvements or additional features for your device. You will be notified via a pop-up window when the system detects that an update is available. Confirmation to install it will be requested. A Wi-Fi connection is necessary to download the update package.

For speed and convenience, the system will guide you through the entire installation process.

You can also check for updates manually by going to **Settings > Device information > Update device**. A message will appear informing you that the system is “checking for updates”. If one is available the installation process will occur as described above.



## Device options



**Language.** Choose from Spanish, Catalan, Basque, Galician, English, French, German, Portuguese or Italian.



**Date and time.** Select your time zone.



**Dictionaries.** Choose the default dictionary. Options available are Spanish or English definitions, English to Spanish translations and vice versa. Information about the dictionaries in the device is available here.



Note that the device must be activated to use the dictionaries.



**Reader.** Modify the reading settings.



 
**Page turn.** Choose between one hand and two hand page turning (the latter is the factory default).

*Turning pages with two hands.* Tap the right third of the screen to turn a page. To go back a page, tap the left third of the screen.

*Turning pages with one hand.* To go back a page, tap near the top of the screen, and to go forward a page, tap near the bottom.


*Enable page turn by Swipe.* Enables page turning using a swipe gesture from right to left, or vice versa, to move forward or backward through the pages.

*Refresh frequency for page turns.* Set the page refresh rate using a value from 1 (a page refresh occurs every page) to 10 (a page refresh occurs every ten pages).

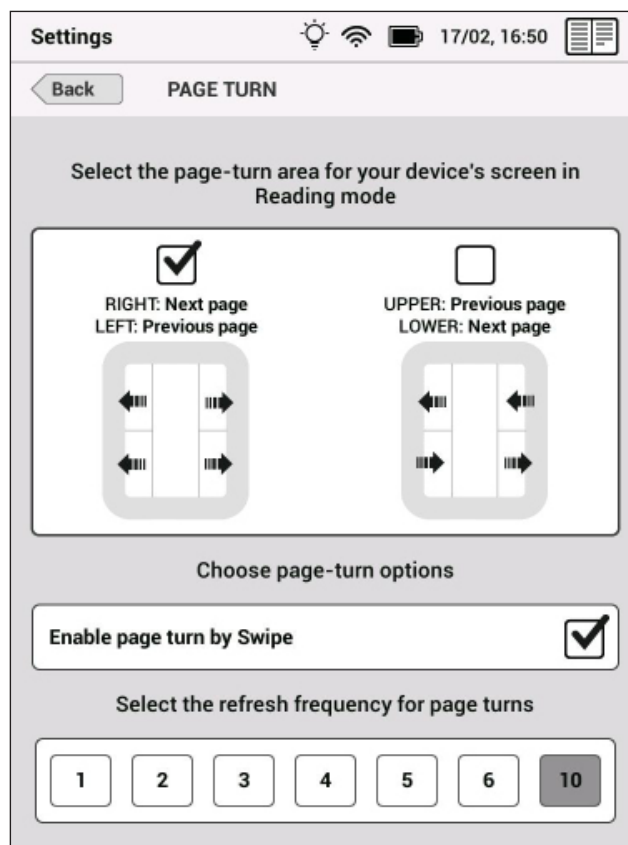



 **Reading status.** Select the information that is displayed while you read. Choose what is displayed at the top of the screen: book title and the time. At the bottom of the screen you can choose to display the percentage read, number of pages read/total, pages remaining in the chapter or the reading progress bar, which can also show marks that represent the chapters of the book.

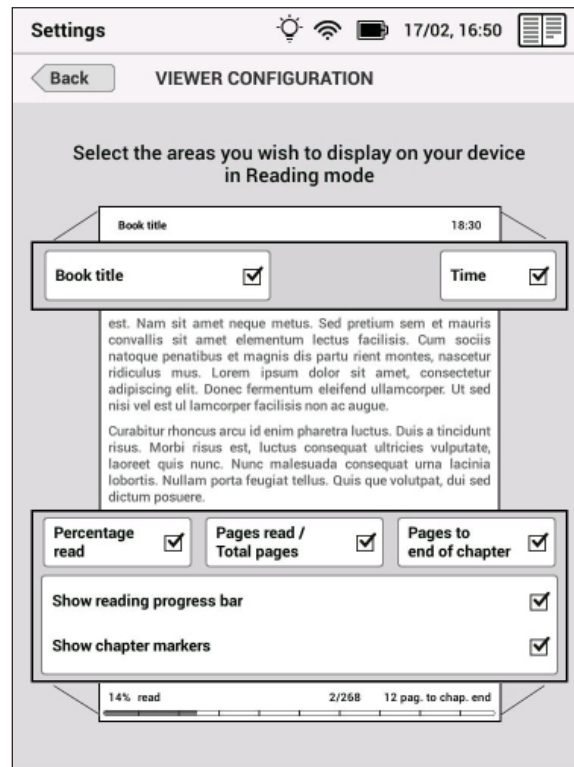

## Energy saving



**Standby timeout.** Set the time that must elapse before the device automatically goes into standby: 2, 5, 10 and 20 minutes.



**Shutdown timeout.** Set the time that must elapse before the device turns off: 2, 6 or 12 hours, 1 or 3 days, or 1 week.





**Screensaver.** Choose a screensaver image from: default screensaver, images saved in the “screensaver- images” folder in your device’s internal memory or the cover of the most recent book.



## Wi-Fi connection

Wi-Fi can be turned on here and a network chosen to which to connect your device. A padlock icon beside the network indicates that it is password protected.

A list of detected Wi-Fi (SSID) networks will appear. Scroll through the list of available networks and tap the desired one. Enter the password and tap **Connect**. The Wi-Fi icon will appear in the bar at the top, indicating the signal strength . If the desired network is not in the list, tap  to automatically refresh the list.

Move through the pages by swiping upward.

To set up a **static IP**, long-press the selected network and then tap **Edit**. Choose between DHCP or Manual, then tap **Connect**.

To connect to a known **hidden network**, go to **Wi-Fi connection > Add network** and enter the name of the network. It will then appear in the list of available networks. Tap the name, enter the password and then press **Connect**.



The Wi-Fi on your Cervantes 4 connects automatically to saved networks. To turn off the Wi-Fi, tap the Wi-Fi icon then tap **OFF**.



## Light settings

Turn the screen light on or off and regulate its intensity.

Settings for OptimaLight are also found here. These allow the tone of the light to be adjusted from cool bluish tones to warmer orangey ones. Reducing blue light emissions relieves eye strain and favours relaxation before going to sleep.

This can be personalised via the Settings menu by selecting the time of day it should start and stop.



## Web browser

To open the Web **Browser**, tap **Settings > Web Browser**.

If the device is not connected to a Wi-Fi network, a list of available networks will be displayed. The browser's default home page is Google Search.

The magnifying glass and favourites buttons are displayed at the bottom of the screen. Tap these buttons to modify the zoom level and to organise, or add to, your favourite pages.



## About

Displays the firmware version installed on your device and the team involved in the development of the product.

## Adobe DRM

### Download books with DRM using Adobe Digital Editions

Books acquired online will need to be transferred to your Cervantes 4 using Adobe Digital Editions software. In this way, all your reading devices will be authorised to display DRM protected books.

To transfer DRM protected books to the ereader, follow these steps:

1. Go to [www.adobe.com/en/products/digital-editions.html](http://www.adobe.com/en/products/digital-editions.html) and install the Adobe Digital Editions software to your computer. Follow the instructions on the said page.



2. Authorise your computer with your Adobe ID and password.



3. Authorise your ereader. Do this by connecting the device to the computer with a USB cable, then open Adobe Digital Editions on the computer. Tap **Authorise device**.



An Adobe ID (Adobe user identification number) can only be used six times to authorise a device. It expires when six different devices have been authorised or when the same device has been authorised six times after having been formatted. If after exhausting these authorisations you need additional ones for the same Adobe ID, contact Adobe Support.

## Appendices

### Appendix A: Technical specifications.

Access all the technical information relative to your device by visiting this link and selecting the corresponding model: [bq.com/en/e-readers](http://bq.com/en/e-readers)

Clicking on **Specifications** will show relevant information, such as:

- Screen.
- Memory.
- Compatible formats.
- Dimensions and weight.
- Processor.
- Battery.
- Operating temperature.
- Available dictionaries.
- Interface.
- Connectivity.
- Connections.

### Appendix B: Cleaning and safety.

#### CLEANING

Before cleaning your device, switch it off and disconnect all system and power cables. Make sure the screen is completely dry before reconnecting any cables and switching on the device. Do not apply any cleaning sprays or liquids directly onto the screen or casing.






**Screen:** use a clean, soft, lint-free cloth to remove dust and dirt from the screen. To remove fingerprints and stains use a cloth with a mild cleanser.

**Casing:** Use a soft cloth slightly dampened with a mild cleaning solution. Rinse the cloth in clean water, wring it out thoroughly and wipe the casing to remove any residual detergent.

#### SAFETY

To reduce the risk of an accident, follow these safety instructions:

- Do not use power cables, connectors or plugs that are damaged or have loose wiring. Do not bend or damage the power cable. Do not touch the power cable with wet hands. Do not pull on the cable to unplug the charger.

- Do not insert objects into the edges of the screen.
- Do not pour liquid in or on the device. Clean it with a damp cloth. If the device gets wet do not turn it on or attempt to repair it. Please call technical support to have the device inspected before turning it on.
- Use environmentally friendly products and avoid handling these in extreme environmental conditions.
- Take care to avoid knocks (direct and indirect) to the device as this could cause irreparable damage to the screen and malfunctioning.
- Keep the ereader away from dust, sand and dirt.
- You can use the device while it is charging, however, this will prolong the charging process. Avoid handling it with wet hands during the charging process.
- Do not subject the charger to impact. Do not charge the battery using chargers that have not been approved by the manufacturer.
- Do not use the device during electrical storms.
- Do not handle lithium-ion batteries that are damaged or leaking.
- Do not use the device near a pacemaker. If possible, avoid using it at distances under 15 cm from the pacemaker as it could interfere with the pacemaker's operation .
- Do not use the device in a hospital or near medical equipment that may be susceptible to radio frequency interference.
- If you regularly use medical equipment, make sure it is protected against radio frequency interference. If you use a hearing aid, consult the manufacturer with regard to potential interference.
- In potentially explosive environments, switch the device off. Always observe regulations, instructions and warning signs .
- Do not use the device in refuelling areas (petrol stations) or close to flammable and/or explosive chemical products .
- Do not store or transport flammable liquids, gases or explosive materials in the same compartment as the device or any of its parts or accessories .
- Switch off the device upon boarding an aeroplane. The electronic components of a motor vehicle may malfunction as a result of radio frequency interference from the device.
- Avoid placing the device near the abdominal and genital area, especially in the case of children, adolescents and pregnant women .
- Wi-Fi (WLAN). Wi-Fi (WLAN). This device operates on the 2.4 GHz band and it can be used in all European countries as well as Russia. Consult your device's Wi-Fi frequency bands in the product specifications.
- Antenna: Use of the device with an antenna other than that supplied by Mundo Reader, S.L. may damage it, impair its performance and generate SAR levels (see [Appendix C](#)) that exceed the limits established by law. Do not cover the antenna with your hand.

- As this is a high-technology device, extreme climatic conditions have a negative impact on its operation. We advise against using it in ambient temperatures under 0 °C or above 45 °C. Doing so may cause malfunctioning or damage to the device (or even explosions in more extreme cases). It is also inadvisable to use it continually at the limits of this range or in adverse climatic conditions as this may cause performance drops that temporarily affect device functionality and battery life.

**Warning!**

This product must be used with a power supply that has, as a minimum, the following specifications:

OUTPUT: 5V  500mA. Recommended: 5V  1A

Connection: MicroUSB

The use of a power supply other than the one indicated may damage your device and pose a risk to the safety of people and property.

## Appendix C: Information on exposure to radio waves and SAR (Specific Absorption Rate).

The design of this ereader complies with the current regulations governing exposure to radio waves. These regulations are based on scientific guidelines that include safety margins designed to ensure the safety of everyone, regardless of age or state of health.

The guidelines on exposure to radio waves use a unit of measurement known as the SAR (Specific Absorption Rate). SAR tests are carried out using standardised methods, with the ereader transmitting at the highest certified level of power on all the frequency bands it uses.

The maximum SAR level recommended by the ICNIRP (International Commission on Non Ionizing Radiation Protection) is 2 W/kg, measured on 10 grams of tissue.

The highest SAR value for this ereader is:

	Cervantes 4
When used in direct contact with the body	1,71 W/Kg (10 g)

This device complies with the guidelines on exposure to radio frequency when it is used next to the body.

## Anexo D: Información sobre la potencia máxima de transmisión y banda de frecuencia.

To access a Wi-Fi network, your device connects to a frequency band, that is, a frequency range in the electromagnetic spectrum. This device complies with the 3GPP (*3rd Generation Partnership Project*) standard regarding maximum transmission power and frequency bands. These are the limit values band in which the device operates:

Frequency band	Maximum power
Wi-Fi 2.4GHz	16 dBm

## Appendix E: Disposing of this product correctly.



(Electrical and electronic waste).

(Applicable within the European Union and in European countries with selective waste collection systems).

The presence of this symbol on the product, accessories or accompanying informative material indicates that, at the end of their service lives, neither the product nor its electronic accessories (charger, cables, etc.) are to be disposed of with household waste.

To prevent any damage to the environment or human health, separate these products from other types of waste and recycle them correctly. This encourages the sustainable reuse of material resources and avoids the depletion of finite ones.

Private users should contact the establishment from which the product was acquired, or the relevant local authorities, to find out how and where they can recycle this product safely without harming the environment.

Business users should contact their supplier and consult the terms and conditions in the purchase contract. This product and its electronic accessories must not be disposed of with commercial waste.

**Firmware version**  
BQ Cervantes 4: 7.0.0  
20180316-1.1

